


# *Furness Railway Scenery Co.*

## **Grounded Coach Body**


Paint and transfers required to complete.

### **The Parts.**

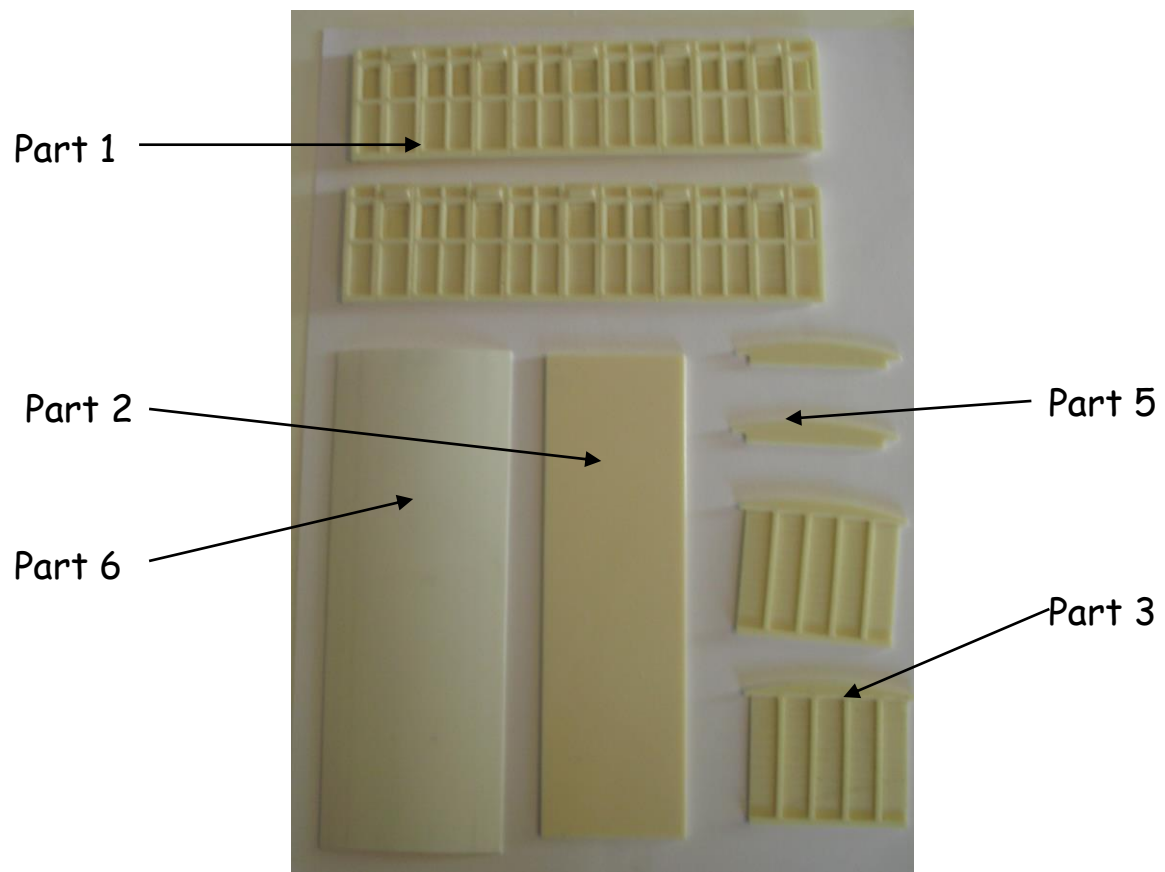


### **Assembly of Coach Body.**


1. Wash and clean up the castings making sure that the casting fit together before gluing. Most grounded coaches had some windows boarded up so you might want to leave some of the windows boarded up.

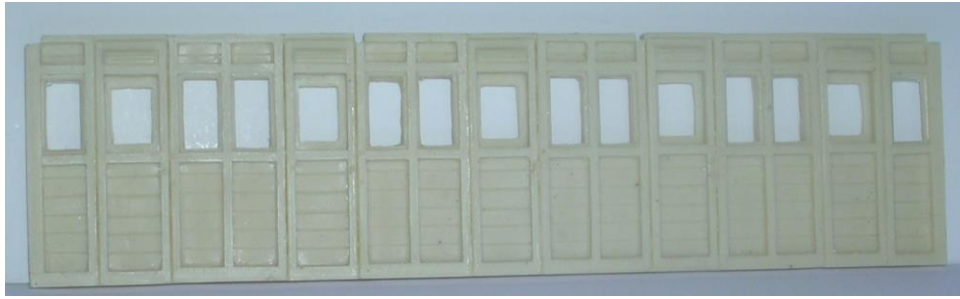

2. Then trim individual ends and sides to fit and then trim the floor to fit exactly between the sides and ends. The length of the floor is designed to be trimmed if required. You may find it a good idea to label the corners

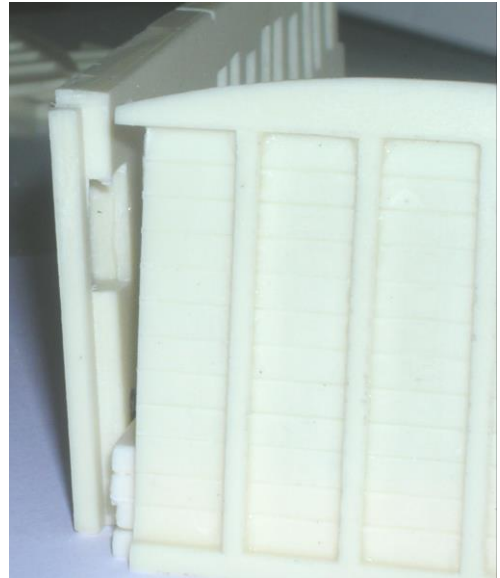


3. Fit one of sides (parts 1) to the floor (part 2), making sure that the ends of the sides line up with the floor and are square. Next fit the ends (Parts 3) to the sides and floor, as shown. Then fit the last side to complete the box.

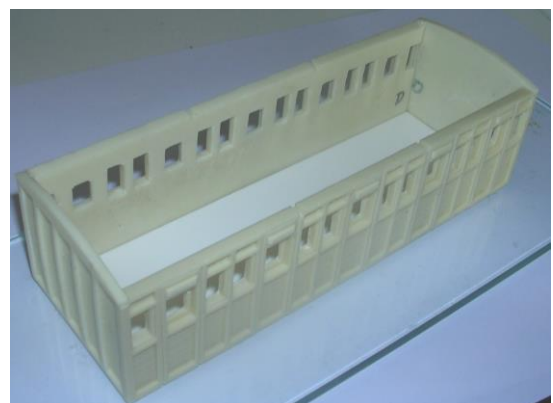

4. If you want to fit any internal detail (Not supplied) then you might find it easier to do it now.

5. Trim slots in the sides of the body to enable the cross members (part 5) to be added.

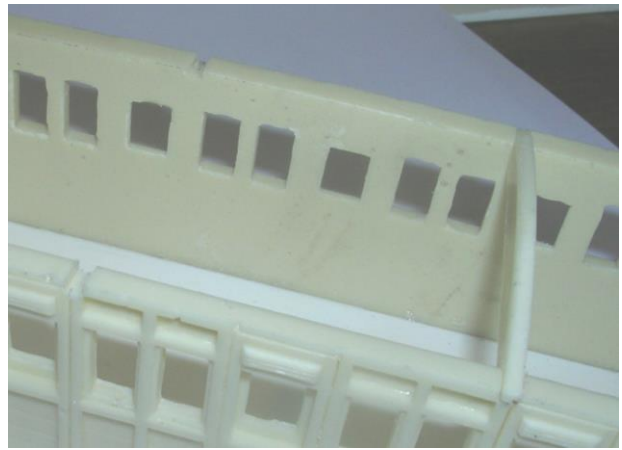

6. Finally fit the roof, making sure that it is square. Paint the model in the livery of your choice.



# *Furness Railway Scenery Co.*

## **Grounded Coach Body**

1. Construction Manual,
2. One rolled etched plastic roof.
3. Two Coach side casting (resin),
4. Two Coach end casting (resin),
5. One Coach floor Casting (resin)
6. Two cross member casting (resin),